



Main Three Quadrants for Runoff Measurements

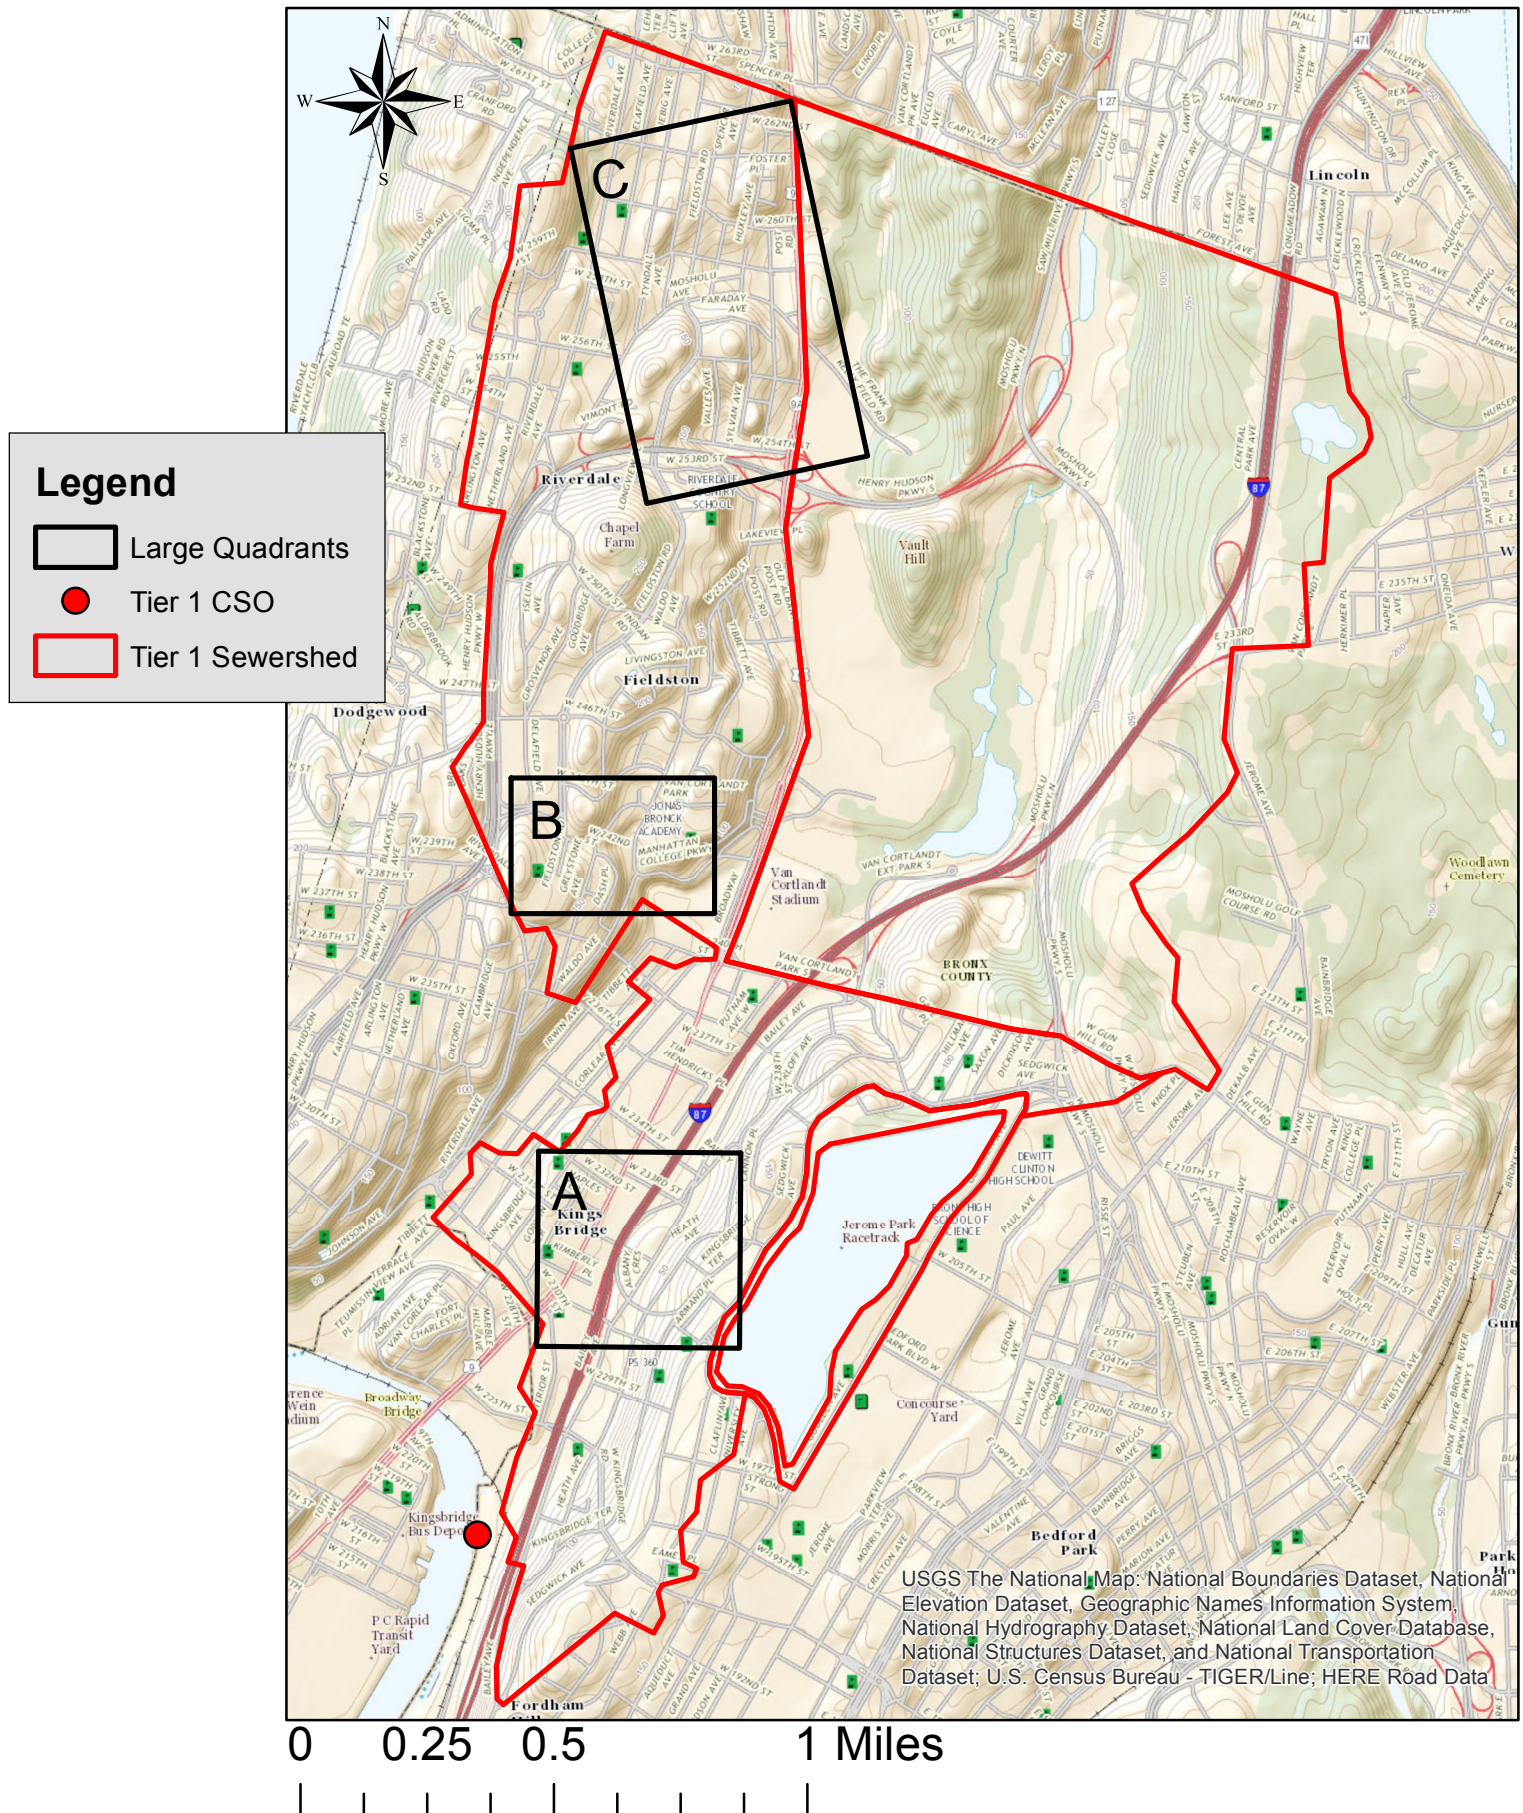


Quadrant "A" Subquadrants

Note: Numbers are estimations of most important quadrants, "1" being the most important (i.e. most likely to have deep channel flow)

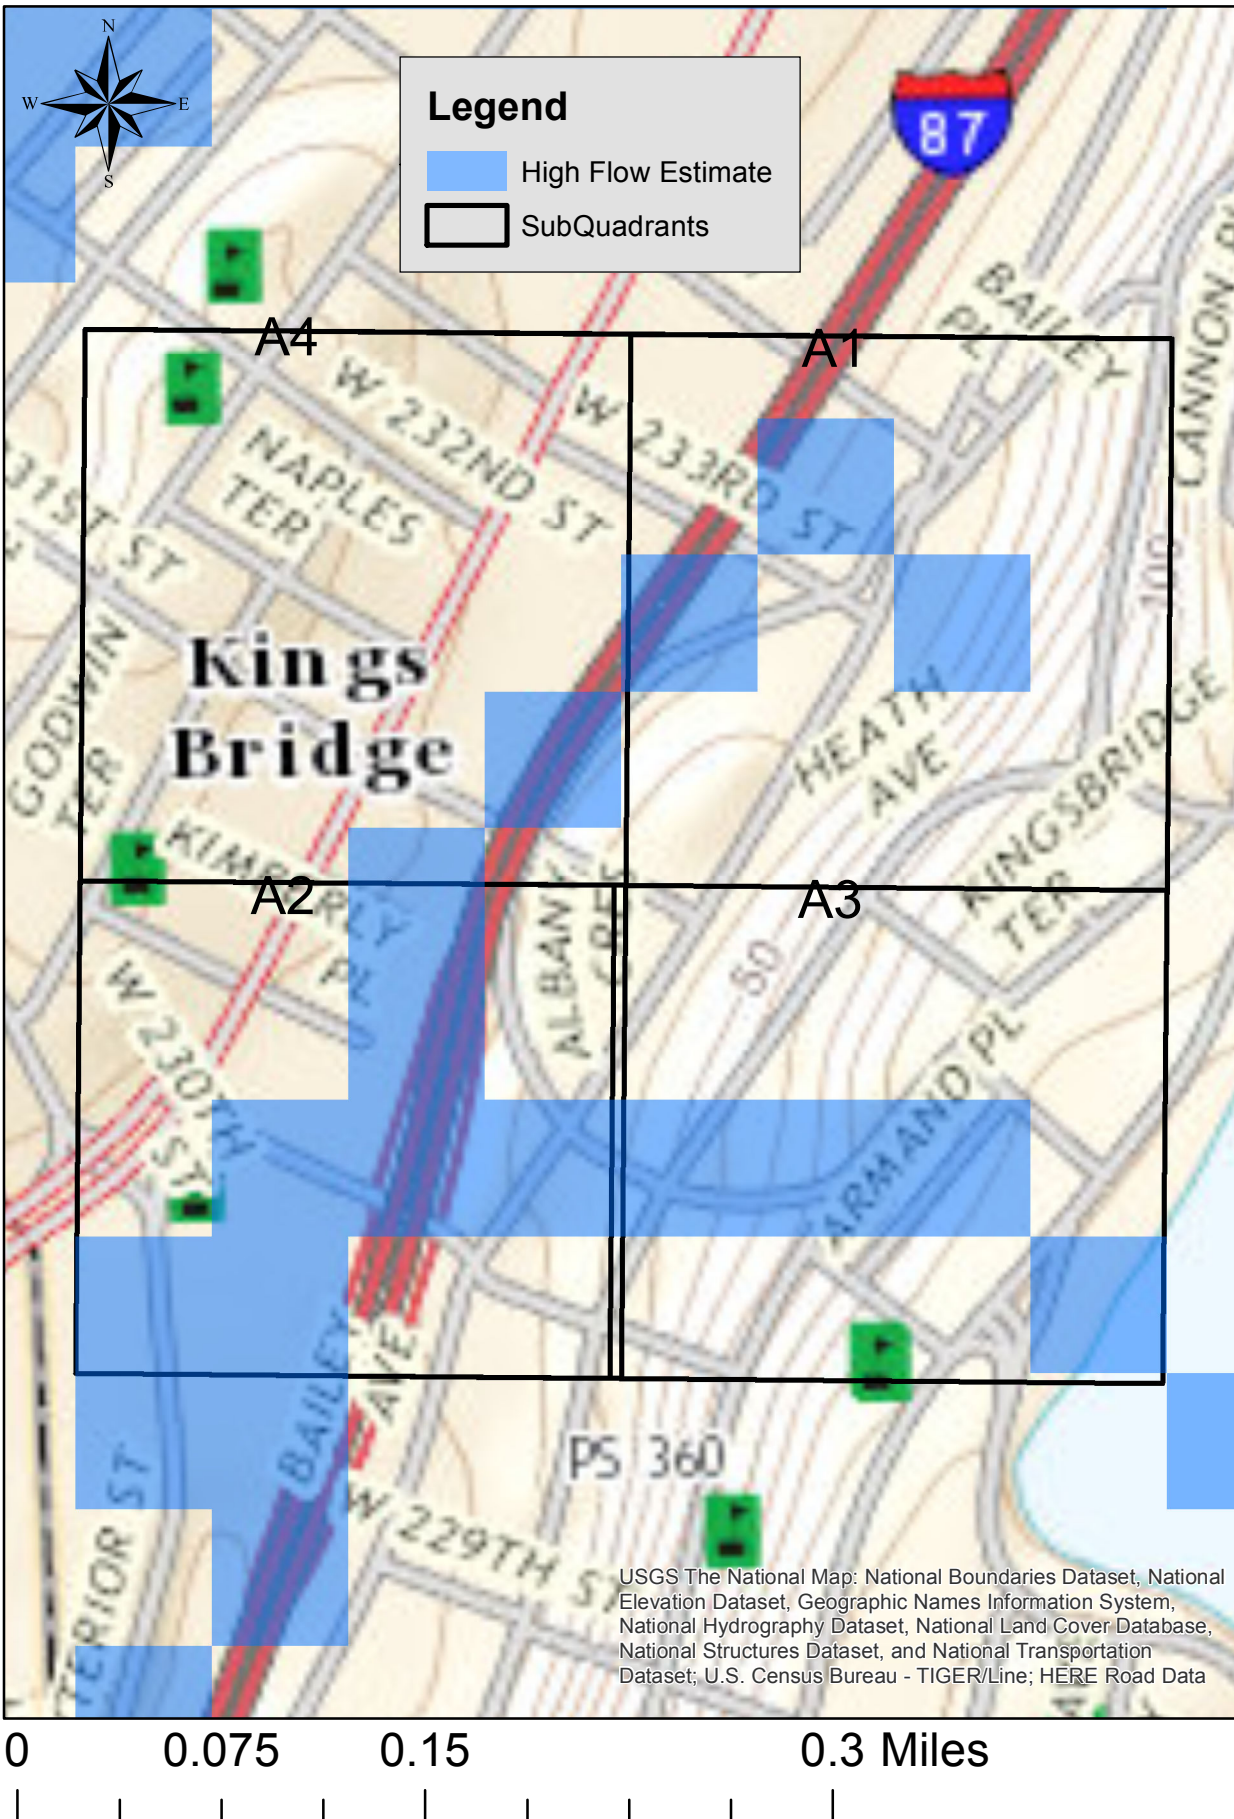

Quadrant "B" Subquadrants

Note: Numbers are estimations of most important quadrants, "1" being the most important (i.e. most likely to have deep channel flow)

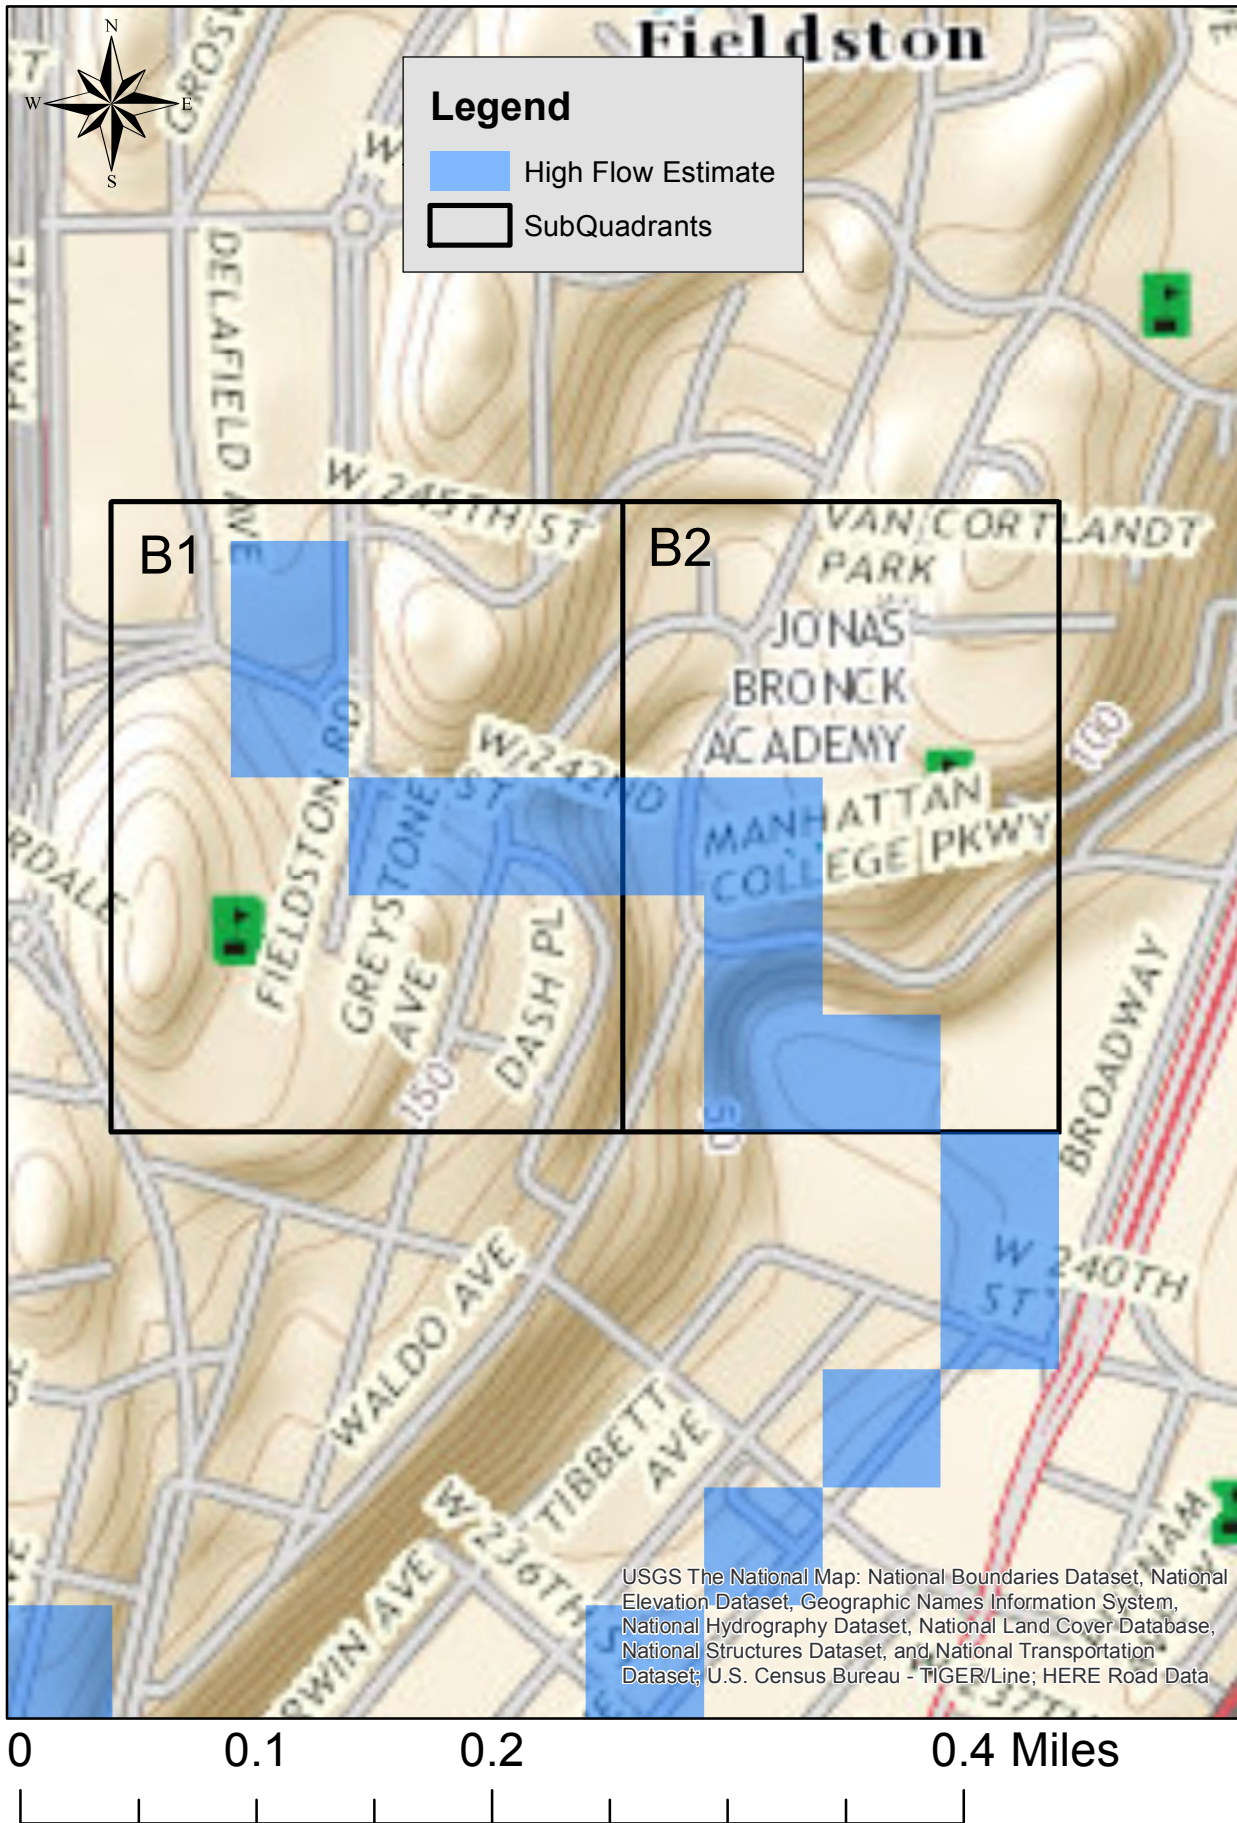

Quadrant "C" Subquadrants

Note: Numbers are estimations of most important quadrants, "1" being the most important (i.e. most likely to have deep channel flow)

